


TJM TYRE DEFLATOR.

USER GUIDE

TJM 4X4 EQUIPPED

PARTS.

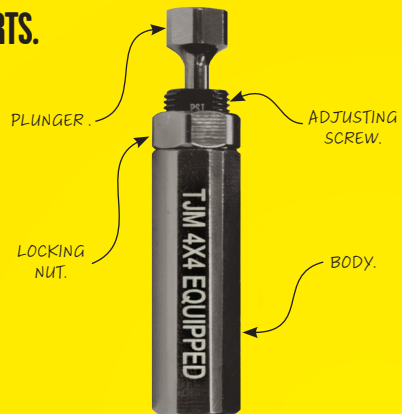

FEATURES.

- Brass & Stainless Steel Construction
- Black Chrome/Black finish
- Adjustable from 12-30PSI
- User friendly pressure indicator readings in increments 6PSI
- Supplied in EVA Storage Case



TJM 4X4 EQUIPPED

f @ v TJM4x4 | www.tjm.com.au

Distributed by TJM Australia
17 Johnstone Road Brendale Q 4500

INSTRUCTIONS.

To Deflate Tyre to Desired Pressure

Before use, check & ensure there is no sand, mud, debris in valve stem or deflator.

1. Loosen the locking nut & turn adjusting screw so that pressure indicator is set at desired pressure. (Fig. 1)



2. Lock adjusting screw using locking nut
3. Screw deflator body clockwise until firm onto valve stem. (Fig. 2)
4. Pull plunger up to start releasing air from deflator. (Fig. 3)



5. A faint popping noise can be heard when desired pressure is reached & deflation has stopped
6. Screw deflator anti clockwise to remove from valve stem
7. Place deflator in storage case



WARNING.

- Driving with reduced tyre pressures will affect vehicles handling performance
- Re-inflate tyre to vehicle manufacturers recommended tyre pressures before driving on sealed roads